


How - To: Open the Hi-Tech Prop Case if the battery is depleted.

Tamperproof (T25H) Torx Driver

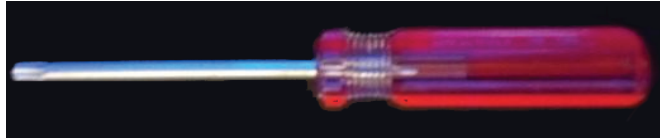

Lock - Out Tool



1. Locate and remove the tamperproof screw in the lower front edge of the case.



2. Insert the tool into the hole.



3. Pivot the handle of the tool to the left gently to actuate the lock mechanism.

